



## XS12 Parts List

Part No.	Description	Part No.	Description
1	Front sight complete	20	Nut
2	Barrel complete	21	Compression tube complete
3	Rear sight base	22	Scope stop
4	Rear sight complete	23	Screw M4
5	Screw M4	24	Trigger pin
6	Elevation knob	25	Piston seal
7	Lever pin	26	Piston
8	Lever	27	Main spring
9	Hinge washer	28	Main spring guide
10	O-ring	29	Trigger housing
11	Screw M5	30	Trigger pin
12	Stock	31	Square nut
13	Trigger guard	32	Trigger
14	Trigger guard screw	33	Sear pin
15	Wood screw	34	Sear complete
16	Stock recoil plate	35	Spring guide
17	Wood screw	36	Trigger spring
18	Oval-head screw	37	End cap
19	Bushing	38	Safety complete