



## XS16 Parts List

Part No.	Description	Part No.	Description
1	Barrel complete	21	Main spring
2	Rear sight base	22	Piston
3	Rear sight complete	23	Piston seal
4	Screw M4	24	Trigger pin
5	Elevation knob	25	Scope stop
6	O-ring	26	Screw M4
7	Lever pin	27	Compression tube complete
8	Lever	28	Oval-head screw
9	Safety board	29	Bushing
10	Trigger housing	30	Nut
11	Trigger pin	31	Safety board spring
12	Sear pin	32	Safety pin
13	Sear complete	33	Safety plank
14	Spring guide	34	Screw M5
15	Trigger spring	35	Screw M5
16	Square nut	36	Plastic stock
17	Trigger	37	Screw M6
18	End cap	38	Stock recoil plate
19	Safety complete	39	Wood screw
20	Main spring guide		